



5 5391 00 X XXXX

## Earphone Acoustic Tube "Gold"



Thank you for choosing a BATSTAR product!

Please briefly read this instruction manual before using this product.


Technical Specification	
IP Class:	IP55
Operating Temperature:	-30 °C ~ 70 °C
Storage Temperature:	-20 °C ~ 60 °C

Specification of Speaker	
Dimension:	Ø 18 mm
Impedance:	90 Ω +/-15 %
Power Rating:	10 mW / Max. 300 mW

### Using the Earphone Acoustic Tube

Put the ear-bud of the Earphone Acoustic Tube "Gold" smoothly into your ear (1) and Tube "Gold" into the following parts:

- Ear-Bud (Small and Large)
- Connecting Piece 90 Degree
- Acoustic Tube
- Connecting Piece "Easy Twist"
- Sound Transducer
- Replacement Cable

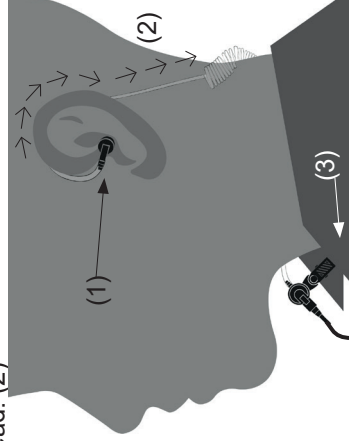

Then stabilize it with the clip on your lapel or collar (3). It can be worn on the right or on the left ear. Before the first use of the Earphone Acoustic Tube, find out which ear-bud (small / large) fits your ear best.

### Comfortable Cleaning

To clean the Earphone Acoustic Tube, disassemble the earphone into its separate parts. Then you can clean ear-buds, connecting pieces and the transparent acoustic tube in warm water. You can clean the transducer and cable carefully with a dry and soft cloth. DO NOT put the sound transducer or cable in any liquids!

Danke, dass Sie sich für ein BATSTAR Produkt entschieden haben!


Bitte lesen Sie diese Bedienungsanleitung, bevor Sie dieses Produkt verwenden.

Technical Specification	
IP Klasse:	IP55
Betriebstemperatur:	-30 °C ~ 70 °C
Lagertemperatur:	-20 °C ~ 60 °C

Spezifikationen des Lautsprechers	
Abmessungen:	Ø 18 mm
Impedanz:	90 Ω +/-15 %
Leistung:	10 mW / Max. 300 mW

### Verwendung des Acoustic Tube

Drücken Sie den Ohrstöpsel des Acoustic Tube (1) leicht in Ihr Ohr. Führen Sie nun den transparenten Schallschlauch entlang des Hinterohrs und hinter dem Kopf auf die andere Seite. (2)

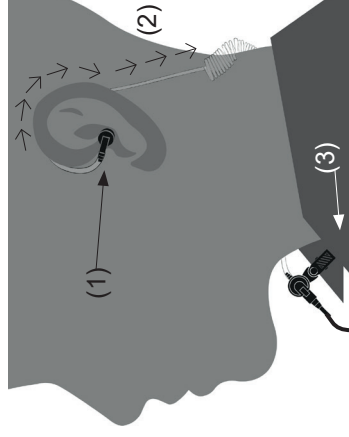

Befestigen Sie mit dem Clip den Schallschlauch an Ihrem Revers oder Kragen (3). Der Ohrhörer kann am rechten oder linken Ohr getragen werden. Testen Sie vor der ersten Verwendung, welche Ohrstößelgröße am Besten in Ihr Ohr passt.

### Komfortable Reinigung

Zum Reinigen des Ohrhörers, zerlegen Sie den Ohrhörer in seine Einzelteile. Dann können Sie Ohrhörer, Verbindungsstück und den transparenten Schallschlauch in warmem Wasser reinigen. Den Schallwandler und das Kabel bitte vorsichtig mit einem trockenen, weichen Tuch reinigen. Tauchen Sie Schallwandler und Kabel NICHT in Flüssigkeiten!

